

 
# BRANCH RH



## ΠΕΡΙΕΧΟΜΕΝΑ / CONTENTS

datasheet	1
manual	2

## ΚΩΔΙΚΟΣ / CODE

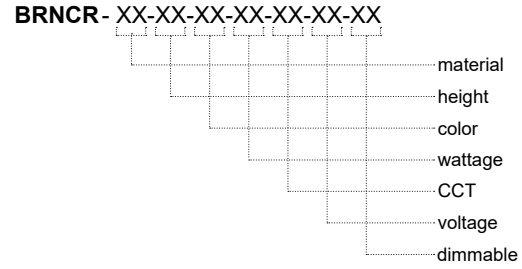

## BRANCH RH (BRNCR) / Datasheet



### General information

Application	Outdoor
Direction of mounting	Ground / wall
IP Classification	IP65
LED	Cree / Osram
CRI	Ra80
Support accessory	Spike D32×150mm Aluminum
Life time	50000 hrs
Warranty	3–5 years (*5 years upon request)
Origin	Greece

 
Material	Height	Color	Wattage	CCT	Voltage	Dimmable
Inox (02)	35cm (H35)	Anodized (AN)	0.5W (05W)	2700K (27K)	12VDC (V1)	Yes (D)
Brass (03)	60cm (H60)	Black (BL)	1W (1W)	3000K (30K)	24VDC (V2)	No (L)
	70cm (H70)	White (WH)	2.5W (25W)	4000K (40K)	350mA (1W only) (V5)	
	100cm (H100)	RAL colors (RL)		5000K (50K)		
	120cm (H120)	No color (L)		6000K (60K)		
	150cm (H150)			(R)/(G)/(B)/(A)		

Δημιουργία Κωδικού προϊόντος / Product Code generator


**BRNCR - material - height - color - wattage - CCT - voltage - dimmable**  
 (ex. BRNCR-02-H50-BL-1W-27K-V1-D for Branch RH, Inox, 50cm, Black, 1W, 2700K, 12VDC, Dimmable)

## BRANCH RH / Manual

1. ΠΡΟΕΤΟΙΜΑΣΙΑ ΤΟΥ ΕΔΑΦΟΥΣ / PREPARATION OF TERRAIN
2. ΚΑΝΕΤΕ ΤΗΝ ΗΛΕΚΤΡΙΚΗ ΣΥΝΔΕΣΗ / MAKE THE ELECTRICAL CONNECTION
3. ΤΟΠΟΘΕΤΗΣΗ ΤΟΥ ΦΩΤΙΣΤΙΚΟΥ / PLACE THE LUMINARY (επιδαπέδια/ground)

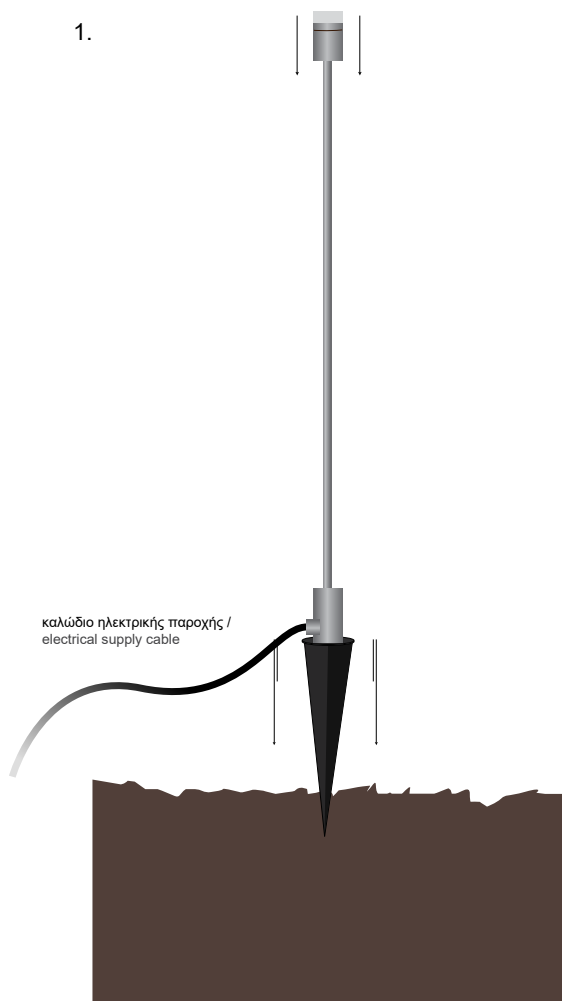

 Μόλις εφαρμοστεί, το φωτιστικό είναι έτοιμο για την χρήση του /  
Once the luminaire is applied, it is ready to be used

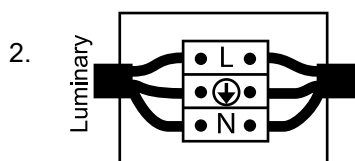

Συνδέστε το καλώδιο του φωτιστικού  
με την ηλεκτρική παροχή. /  
Connect the cable of the luminaire  
with the electrical supply.